

• • • ROLAND R-26 SMART GUIDE • • •

BASIC SETUP

- put in batteries + SD card
- power up recorder
- press MENU

use the touch screen buttons controls to select and set menu items

- **SYSTEM SETUP**
 - set battery types
 - auto off - set longer
- Date / Time - set
- SD card - format
- **REC SETUP**
 - 2 channel
 - Rec source: internal or Analog
 - sample rate: 48.0 kHz
 - Rec Format: WAV 24 bit
- **Input Setup**
 - Analog In : separate
 - phantom power off

- Press Menu twice to quit


RECORDING (wear headphones)

- press the MON tab to turn on headphone jack
- Press the REC button to go into pause
- adjust the input levels while the red light flashes
- ideal levels are between 12dB and -6dB
- press the SENS button to increase mic pickup
- press REC to start recording

Start audio recording before video recording and stop audio recording after stopping video recording.

SHOTGUN WITH BOOM POLE

- hold shotgun above subject
- microphone should be as close as possible to subject's mouth without being on camera

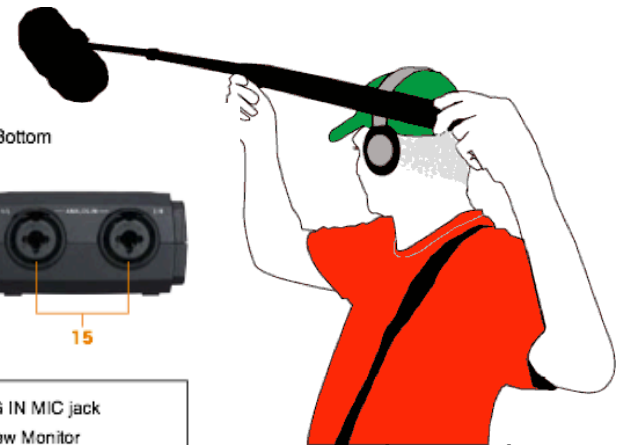

proper boompole operation
move the microphone back
and for to adjust levels.



Front panel

Rear panel

Left side panel

Right side panel

Top

Bottom



- | | |
|--------------------------|-------------------------------|
| 1 Touch panel display | 9 PLUG IN MIC jack |
| 2 INPUT LEVEL knobs | 10 Preview Monitor |
| 3 Battery compartment | 11 PHONES jack |
| 4 Tripod mounting socket | 12 VOLUME dial |
| 5 SD card slot | 13 Omnidirectional (OMNI) mic |
| 6 USB connector | 14 Directional (XY) mic |
| 7 POWER/HOLD switch | 15 XLR/TRS jack |
| 8 DC IN jack | |